

MOULDINGS ONE

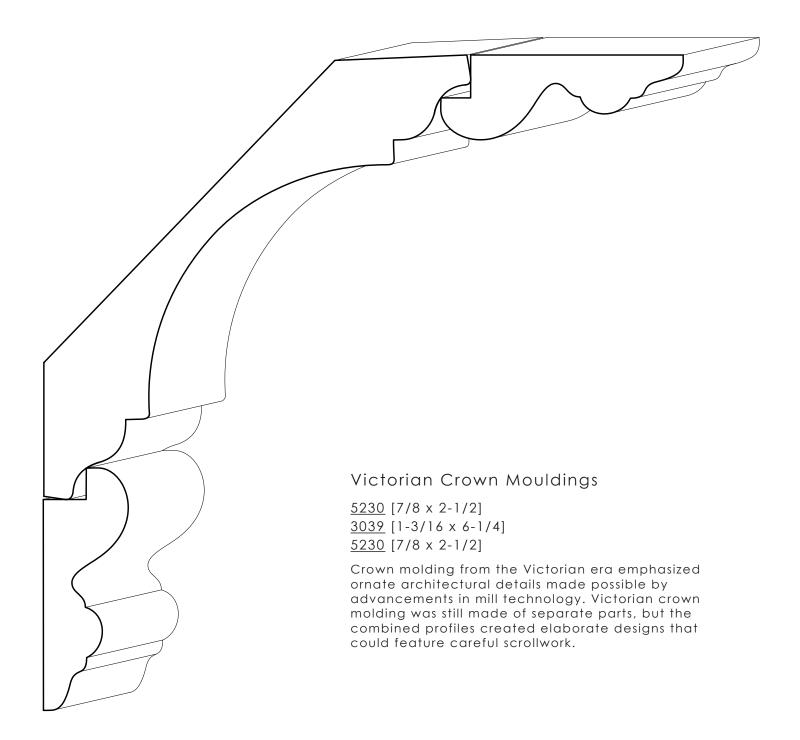

<u>Wood Combination - Victorian</u>

13851 STATION ROAD, MIDDLEFIELD, OHIO 44062
P. 440-834-3420 OR 1-877-708-4095 E. SALES@MOULDINGSONE.COM
HOURS: MON.-FRI. 8AM-4:30PM, SAT. 8AM-12NOON
www.mouldingsone.com

MOULDINGS ONE

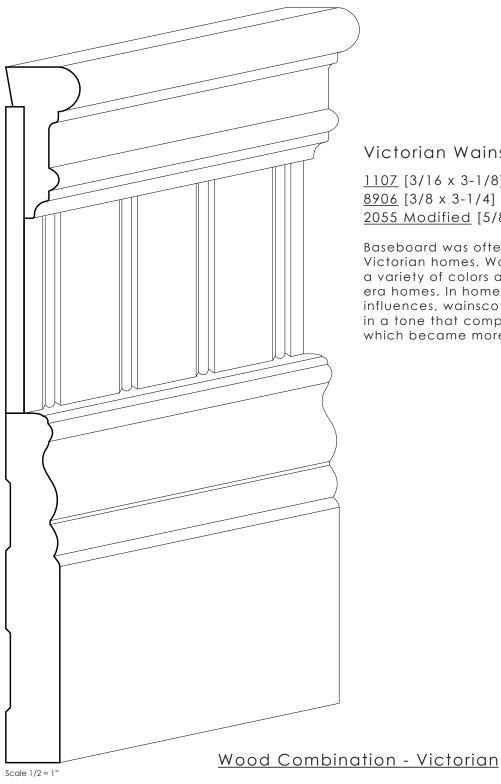

Victorian Wainscot and Baseboard

1107 [3/16 x 3-1/8] 8906 [3/8 x 3-1/4] 2055 Modified [5/8 x 7-1/4]


Baseboard was often accompanied by wainscoting in Victorian homes. Wall panelling in particular featured a variety of colors and finishes in many Victorian era homes. In homes inspired by Gothic or Romantic influences, wainscoting was often painted or stained in a tone that complimented patterned wallpapers which became more common during this period.

13851 STATION ROAD, MIDDLEFIELD, OHIO 44062 P. 440-834-3420 OR 1-877-708-4095 E. SALES@MOULDINGSONE.COM HOURS: MON.-FRI. 8AM-4:30PM, SAT. 8AM-12NOON www.mouldingsone.com

MOULDINGS ONE




1107 [3/16 x 3-1/8] 2033 [3/4 x 5-1/2]

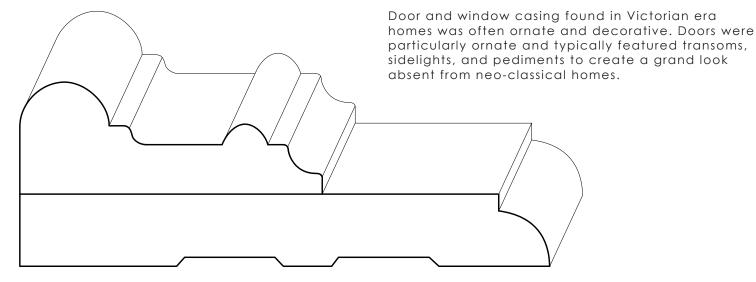

Victorian Plinth Block

8550 [2 x 5-3/4]

Plinth blocks were common in Victorian homes. They sat at the base of door or window casing, adding depth to the outline of an opening.

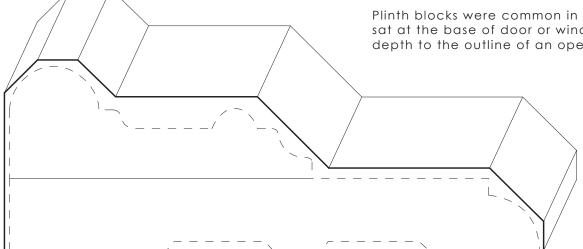

Wood Combination - Victorian

13851 STATION ROAD, MIDDLEFIELD, OHIO 44062 P. 440-834-3420 OR 1-877-708-4095 E. SALES@MOULDINGSONE.COM HOURS: MON.-FRI. 8AM-4:30PM, SAT. 8AM-12NOON www.mouldingsone.com